

## Removing an LED module from recessed LED downlights

The LED module is a replaceable item. The module and its glass cover is held in place by a metal retaining ring. The ring is held in place by spring clips that grip the sides of the fitting.

The retaining ring can easily be removed by gently levering it out using a small screwdriver:

### 1. Complete assembled fitting



### 2. Gently lever out the retaining ring

Use a small screw driver (or similar tool) to carefully lift the retaining ring out of the fitting. It may be easier to gently lift all sides a small amount before completely removing the ring.



### 3. Completely remove the retaining ring



#### 4. Retaining ring and glass cover removed

The retaining ring holds the glass cover in place. Be careful not to damage the glass disc!



#### 5. Remove the LED module

The LED module can be gently pulled from its socket and replaced with a new one.



Assembly is the reverse of removal.