

## **Installation & Maintenance instructions for ARGYLL-PIR.**

### **Important Information**

It is recommended that luminaires are installed by a qualified electrician. The installation of this product must comply with the current edition of the IEE wiring regulations BS7671.

These products are designed for connection to a 240V 50Hz supply.

Any damaged parts should be replaced as soon as possible. We will not accept responsibility for any claims arising from a poor installation.

### **Important User Advice**

Always switch off mains supply before installation or servicing.

We recommend a maintenance schedule of washing down with soapy water (no abrasive cleaners) and greasing all screws every 3 months.

### **Installation:**

1. Remove and retain the 2 screws holding the back plate to the wall light (located top and bottom of the fitting)
2. Remove the single screw and retain to the cable housing.
3. Fix the plastic back plate to the wall using suitable fixings for the substrate ensuring that it is installed with the arrow pointing up.
4. Connect the supply to the terminal block: Brown (live) and Blue (neutral) as per fig 1.
5. Refit the cable housing.
6. Attach the wall light to the plastic plate using the 2 screws you retained earlier.
7. Switch on the supply, test and adjust the PIR.

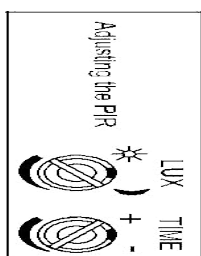


Fig. 2



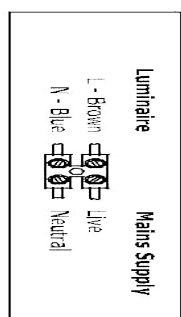


Fig. 1

### **Lamp/PIR Details**

Light Source: Dedicated LED  
 Wattage: 10W  
 Lumen Output: 400 Lumens  
 CR: 82  
 Colour: 4000K  
 Detection Angle: 130°  
 Time Adjustment: Min. 5 seconds ~ 5 Minutes Max.  
 Lux Adjustment: Min: 5 lux ~ 2000 lux Max.  
 Detection Range: 0-12m

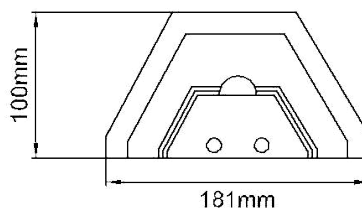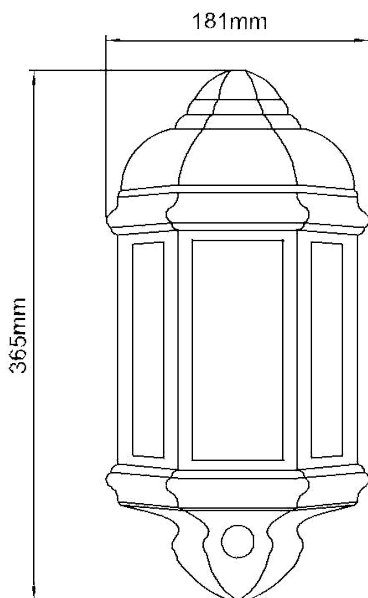

Not for general waste. Please contact your local authority on how to dispose correctly.