Technical data

Supply Voltage:

220-240 V∼, 50 Hz

Bulb Type:

7W LED module (SMD), 4000K

This product contains a light source of energy efficiency class **E**.





Non-replaceable light source



Non-replaceable control gear



Conformity with all relevant UKCA Directive requirements.



Conformity with all relevant EC Directive requirements.



The power supply is Double Insulated and does not require connection to an Earth circuit.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



This product is rated at IP44.



This product is rated at IK08.

Care and Safety

Live Voltages may be present in this unit even when turned off or when completely disconnected.

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before changing lightbulbs, or cleaning.



This LED's are protected by a PC shade. The shade part must be replaced immediately should it become cracked or damaged. This fitting must not be used without the PC shade in place.

Instruction manual

Halbury PIR Wall

54553, 54554



For further information, please visit https://www.lighting-info.co.uk/54553

V6 17/08/2023

UK Manufacturer: BH17 7BY **EU Manufacturer:** Brilliant AG, Brilliantstrasse 1, D-27442 Gnarrenburg





Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

Warning

 \square The power supply is Double Insulated and does not require connection to an Earth circuit.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

If replacing an existing fitting, make a careful note of the connections.

The entire unit gets hot whilst on for a period of time, ensure the fitting is mounted out of arms reach.

Never put anything on the product or hang anything on any part of this product.

This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be scrapped.

The entire unit gets hot whilst on for a period of time.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Layout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distances between the junction box and the each light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and outdoor rated junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

We recommend that you use H05RN-F specification cable (not supplied) which is an outdoor grade, rubber sheathed cable.

The mains supply cable must have a minimum cross section area of 1.0mm².

Cables must be protected using suitable conduit or plastic trunking.

Take care not to drill into any pipes or mains cables beneath the surface during mounting holes preparation.

This product must be mounted out of arms reach.

Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.


Note that the switch is turned off before installation.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

After deciding the layout of the light fittings ensure that the cables are long enough to connect to desired positions.


- Determine the position of your light fitting taking into account the entry position of the cable and the ARROW indicating
 which WAY UP the base is to be fitted. Make sure there is sufficient cable coming out of the wall to connect to the terminal
 block. Ensure that the mounting surface is solid, preferably a brick or block wall and ensure that there are no other cables or
 pipes beneath the surface.
- The help of an assistant is recommended when installing this fitting.
- Remove the finials from the front of the product and lift the light fitting body away from the wall back. Keep the finials in a safe place for refitting later.
- Using the wall back as a template, mark the position of the mounting holes. Drill holes and fit supplied wall plugs (suitable for masonry only for other surfaces use appropriate fixings). Feed the incoming mains supply cable through the grommet entry hole. Fix the wall back to the wall using the supplied screws (See **Fig. 2**).

- Wire as detailed wiring diagram.
- Refit the shade. Reconnedt PIR sensor cable if necessary. Make sure the fitting is correctly oriented in a vertical direction.
- · Replace fuse or circuit breaker and switch on. Your light is now ready for use.

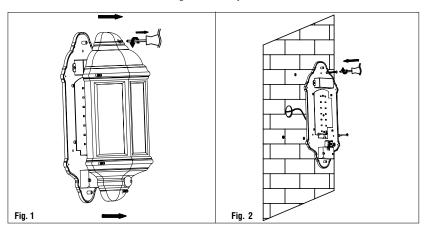

Wiring

Having correctly identified the wiring from your existing light fitting, pull the mains wire through the hole and connect to the auick fit connection block inside the product in the following way:

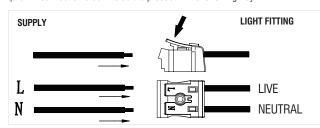

Check that...

You have correctly identified the wires The connections are tight

No loose strands have been left out of the connection block.

Reseal the approved outdoor rated external terminal block

PIR Adjustment

- The unit must be installed in a vertical position, and fitted 1.8-2.5m above the ground.
- The PIR sensor can be adjusted using the LUX and TIME screws. The detection angle is set at 130° and the detection
 distance is 8m. The PIR will start activating when the light level drops to 20 LUX and will continue to activate until the light
 level rises to 2000 LUX. When adjusting the sensitivity (detection distance) in daylight it will be necessary to cover the
 sensor to simulate night time. When the PIR is activated the light will remain lit for a maximum of 5 minutes.

The minimum is 5 seconds.

