 


Wiring

Having correctly identified the wiring from your existing light fitting, Pull the mains wire through the hole and connect to the quick connection terminal in the following way.

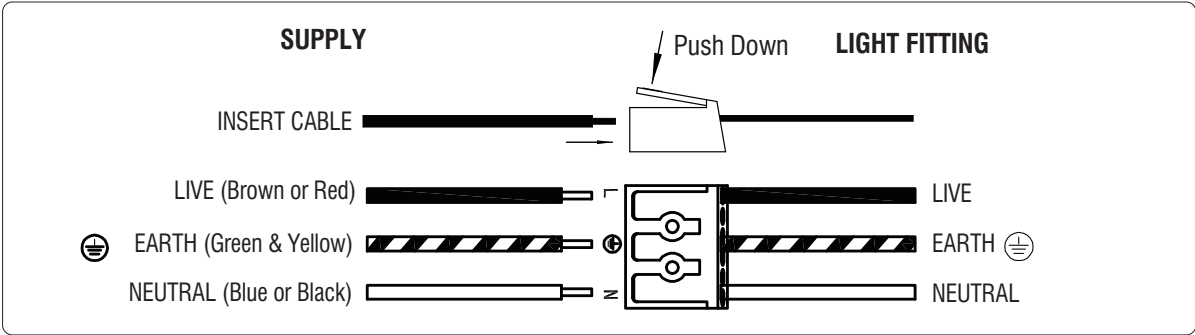

Check that...

You have correctly identified the wires. The connections are tight. No loose strands have been left out of the connection block.

Fitting/replacing bulb

When changing a bulb, always switch off at the mains and allow the bulb to cool before handling. Dispose of used bulbs carefully.

Do not exceed the wattage stated or use a different shape bulb from that indicated on the fitting.



To access the bulb, unscrew the lamp covers. Turn the bulb and remove. Push the new bulb gently into the lampholder and twist to engage pins. Finally, refit the lamp covers.

Technical data

Supply Voltage: 220-240 V~, 50 Hz

Bulb Type: 2 x Max. 7W LED GU10 (required)

UK CA Conformity with all relevant UKCA Directive requirements.

CE Conformity with all relevant EC Directive requirements.

 This light fitting is Class 1 and must be earthed.

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

 
 This product is rated at IP65.

Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish.

For your safety, always switch off the power supply before replacing bulb and cleaning.

Always disconnect the product from mains at least 10 minutes allowing to cool down before any maintenance or adjustment.



This bulb is protected by a glass shade. This part must be replaced immediately should the glass shade become cracked or damaged. This fitting must not be used without the glass shade in place.

Instruction manual

Scope PIR/Photocell 2LT

121029, 121033



Warning



To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

If replacing an existing fitting, make a careful note of the connections.

When changing a bulb, always switch off at the mains and allow the old bulb to cool down before handling. Dispose of use bulbs carefully and responsibly.

Layout

Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

This product must be mounted out of arms reach.

This product has special protection against the ingress of moisture.

 
 
Spotlights give a concentrated beam of light and must not be positioned any closer than 0.5m (50cm) to the illuminated surface.

Take great care when adjusting the sensor screws not to over tighten as they can be easily broken.

- When adjusting the sensitivity (detection distance) in daylight it will be necessary to cover the sensor to simulate night time.


The detection angle is set at 120°.

- Photocell: 3 - 2000 Lux adjustable.

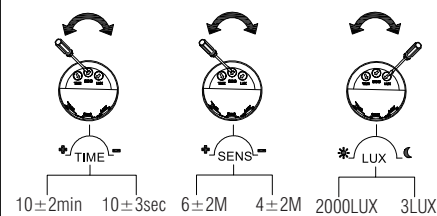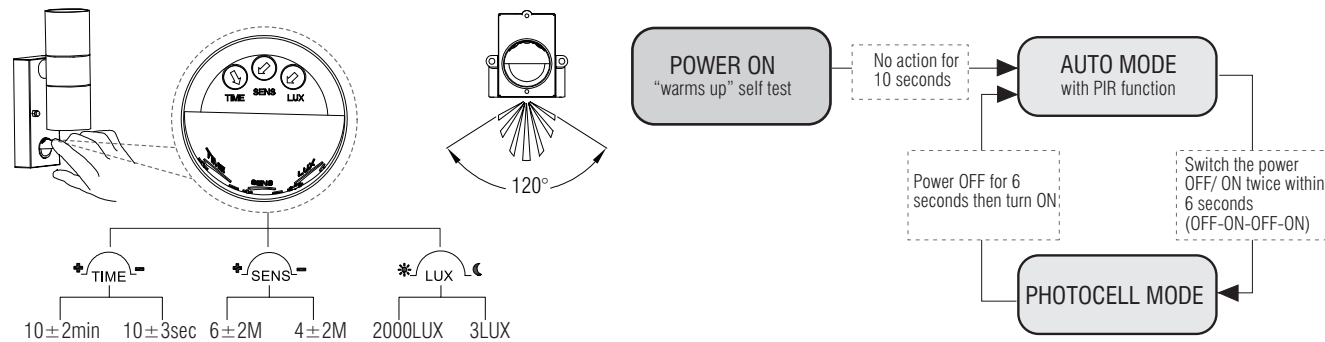


With PIR function

 In PHOTOCELL mode, power OFF for 6 seconds then turn ON will change into AUTO MODE with last setting.

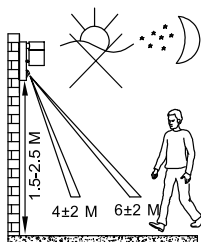

 
When LUX is set to the “☾” position, the lamp is off during the day and on at night.

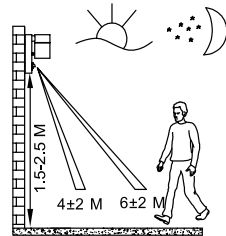

When it is set to the “☀” position,
the lamp is on at night and during the day.

Switch the power OFF/ON twice within 6 seconds (Off-On-Off-On), the PIR detector will automatically change into PHOTOCELL MODE from AUTO MODE. It can be adjusted with LUX switching, if adjust to "☀" mark direct, lamp will remain on.

 lose efficacy

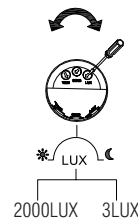

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, **carefully** note the position of each set of wires.

Note that the switch is turned off before installation.

Decide on the position of the light fitting, or remove existing light fitting. Note the position of the electrical connections. Ensure there is a solid mounting surface.

- Rotate the nuts counterclockwise to remove the rear housing fixed on the lamp body, retain the nuts for re-use, then take off the quick connect terminal.
- Place the rear housing of the lamp on the designated wall and mark the location with a marker pen. Drill a 30mm deep hole in the wall with a Ø6mm drill bit and insert the expansion tube into the hole.
- Choose the cable entry hole to open and pull the wire through the hole. Fixed the rear housing to the wall with screws.
- Remove the lamp covers, install the bulbs. Refit the lamp covers, ensuring the seal is tight. **Never fit a bulb with a higher wattage, as this could cause over heating and damage the fitting.**

- Wire as detailed wiring.
- Rotate the nuts clockwise to refit the lamp body to the rear housing.
- Replace fuse or circuit breaker and switch on. Your light is now ready for use.

